

WPC CLADDING INSTALLATION



Tools and Accessories



Chainsaw



Tape measure



Drill



Level



Gas nailer



Joist



SS screw



Starting clip




Dovetail nails



L-corner

Easy Installation

Fixed joist

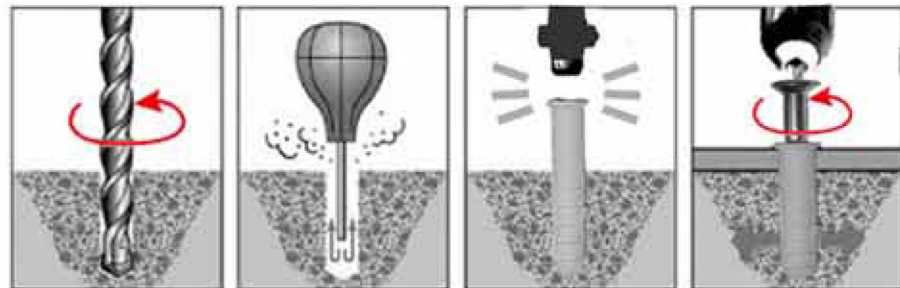

Expansion screws




about 30 cm

·Fixed the joist with expansion screws.



·Every 0.5 meters an expansion screw.

WPC CLADDING INSTALLATION

Fixd Starting clip

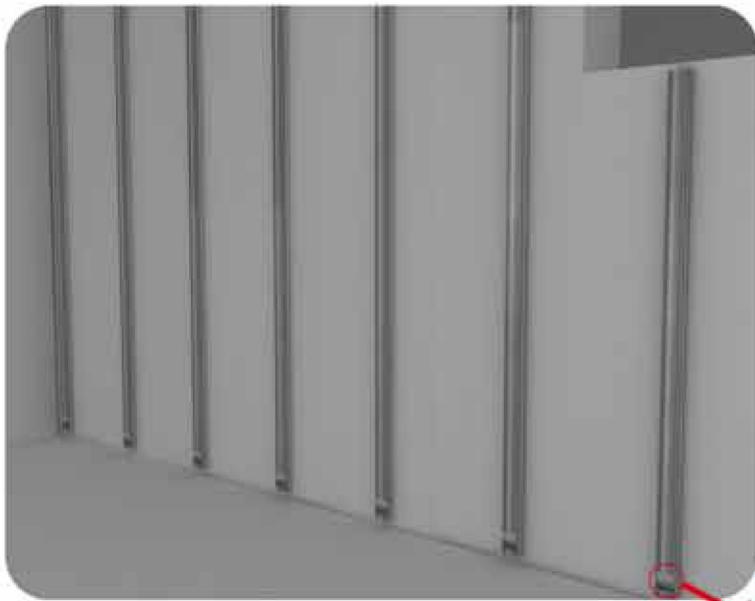



Fixd wall cladding

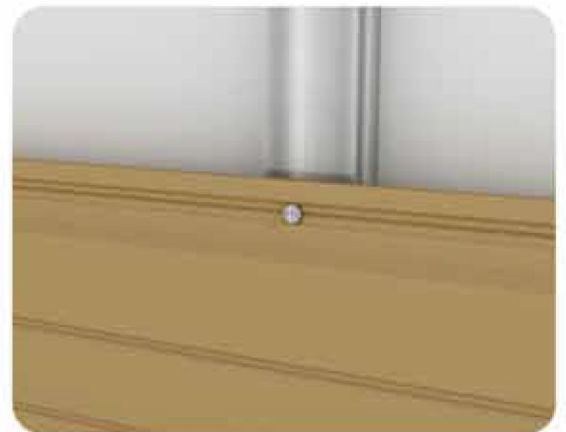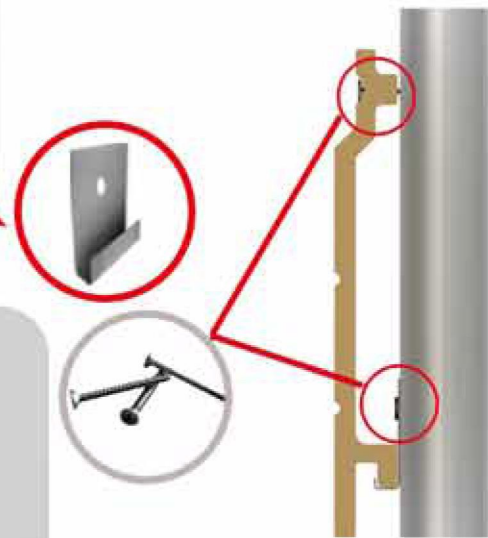




Fixed the first panel at the bottom.

WPC CLADDING INSTALLATION

Fixd wall cladding

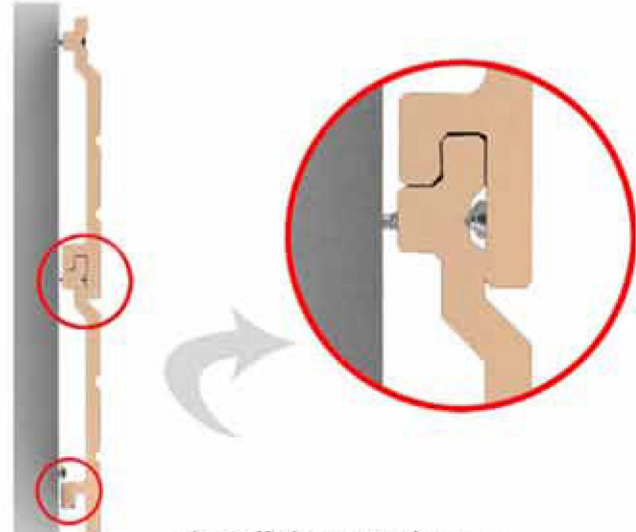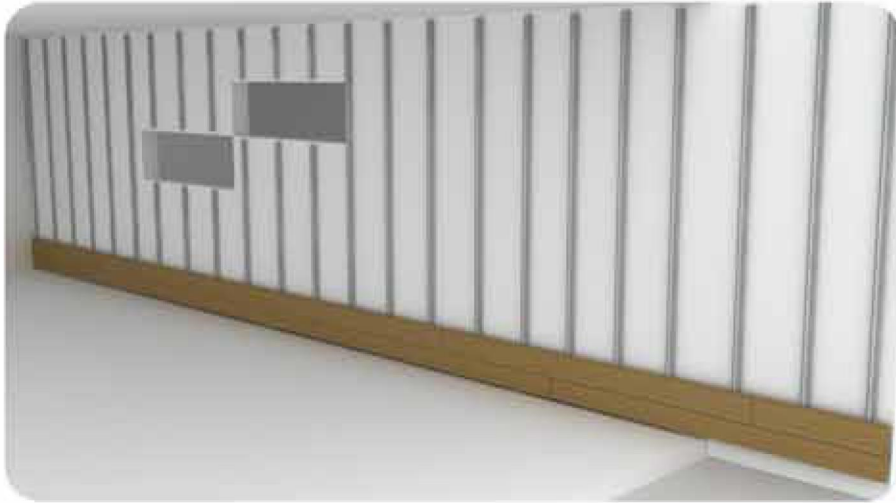


·Install them one by one.

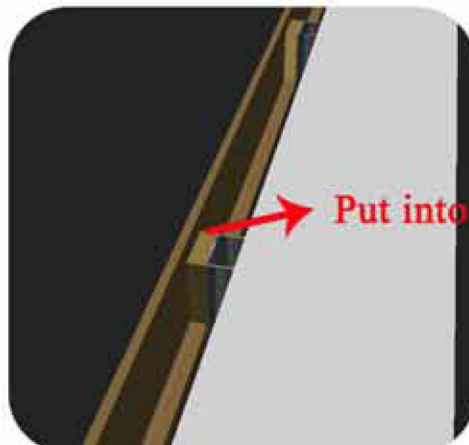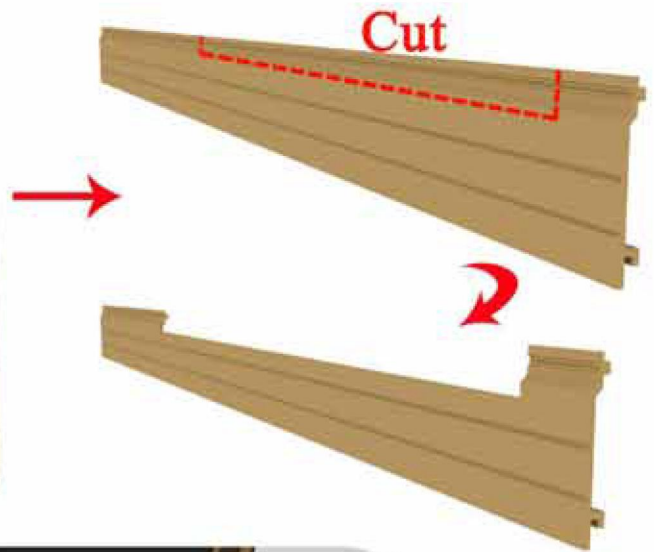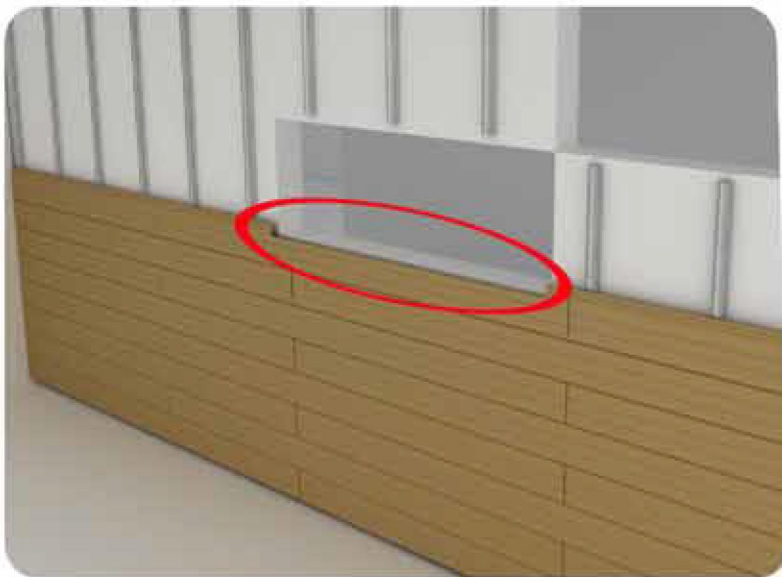


WPC CLADDING INSTALLATION

Fixd wall cladding

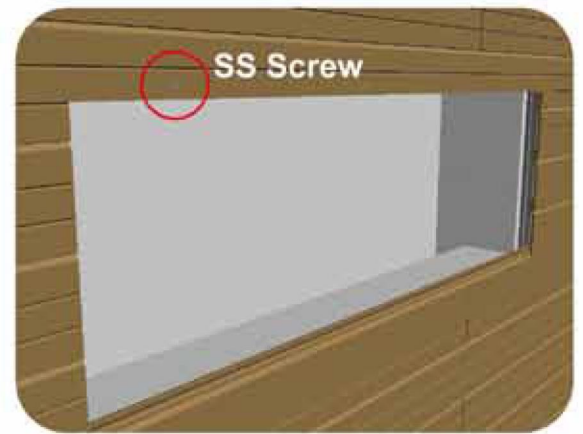


Install L Corner

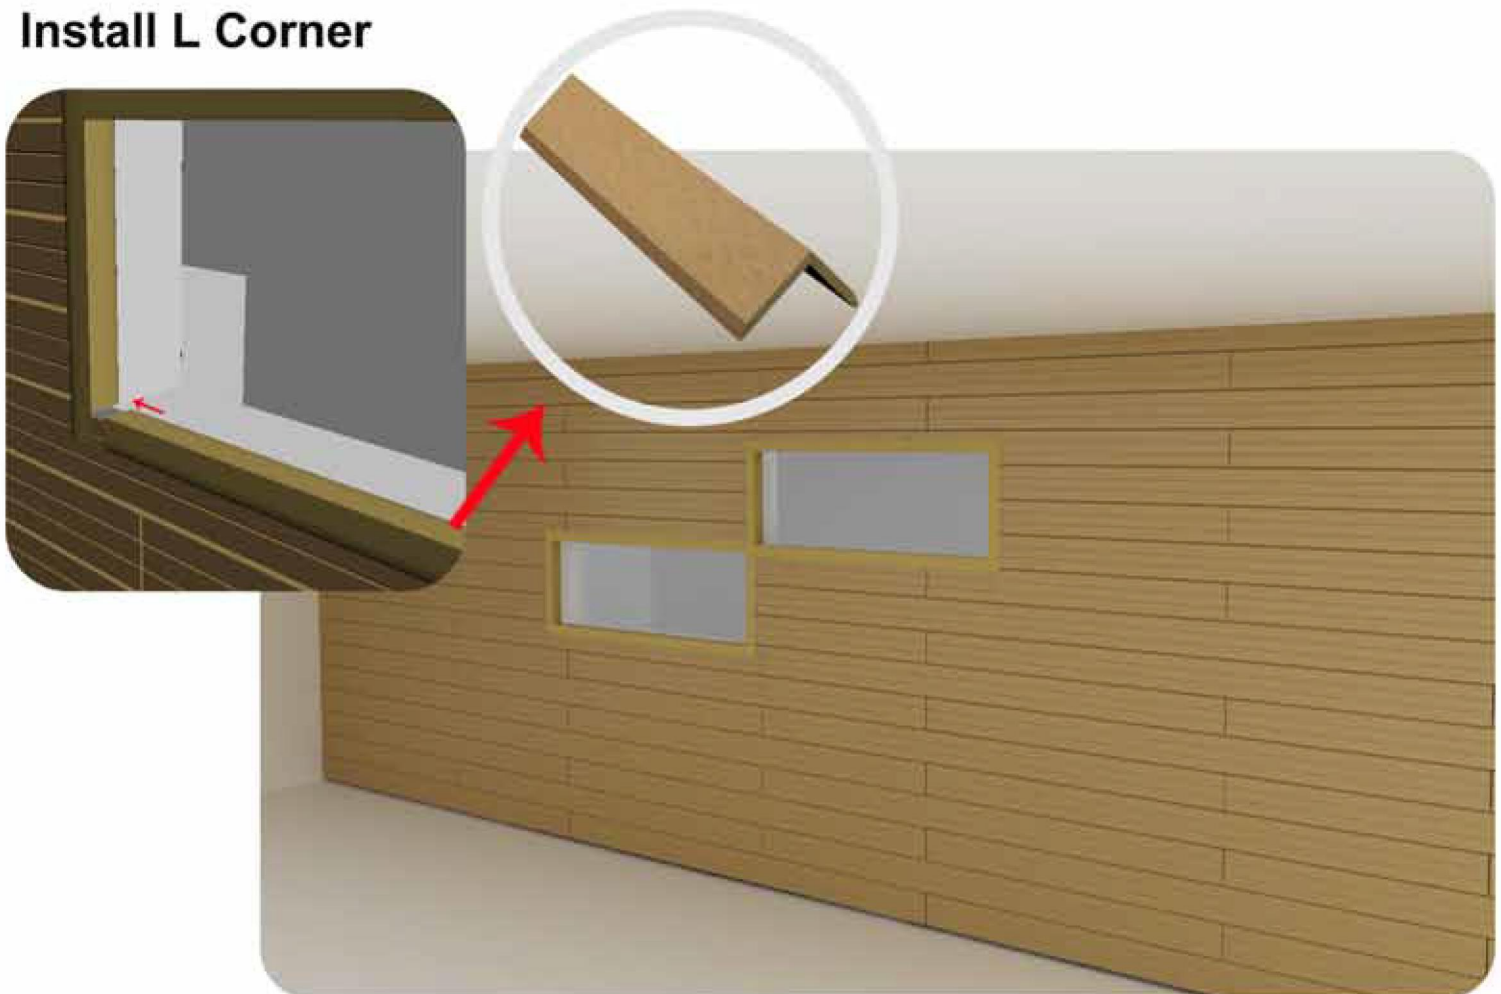

WPC CLADDING INSTALLATION

Install L Corner

NECO 耐可木
WOOD

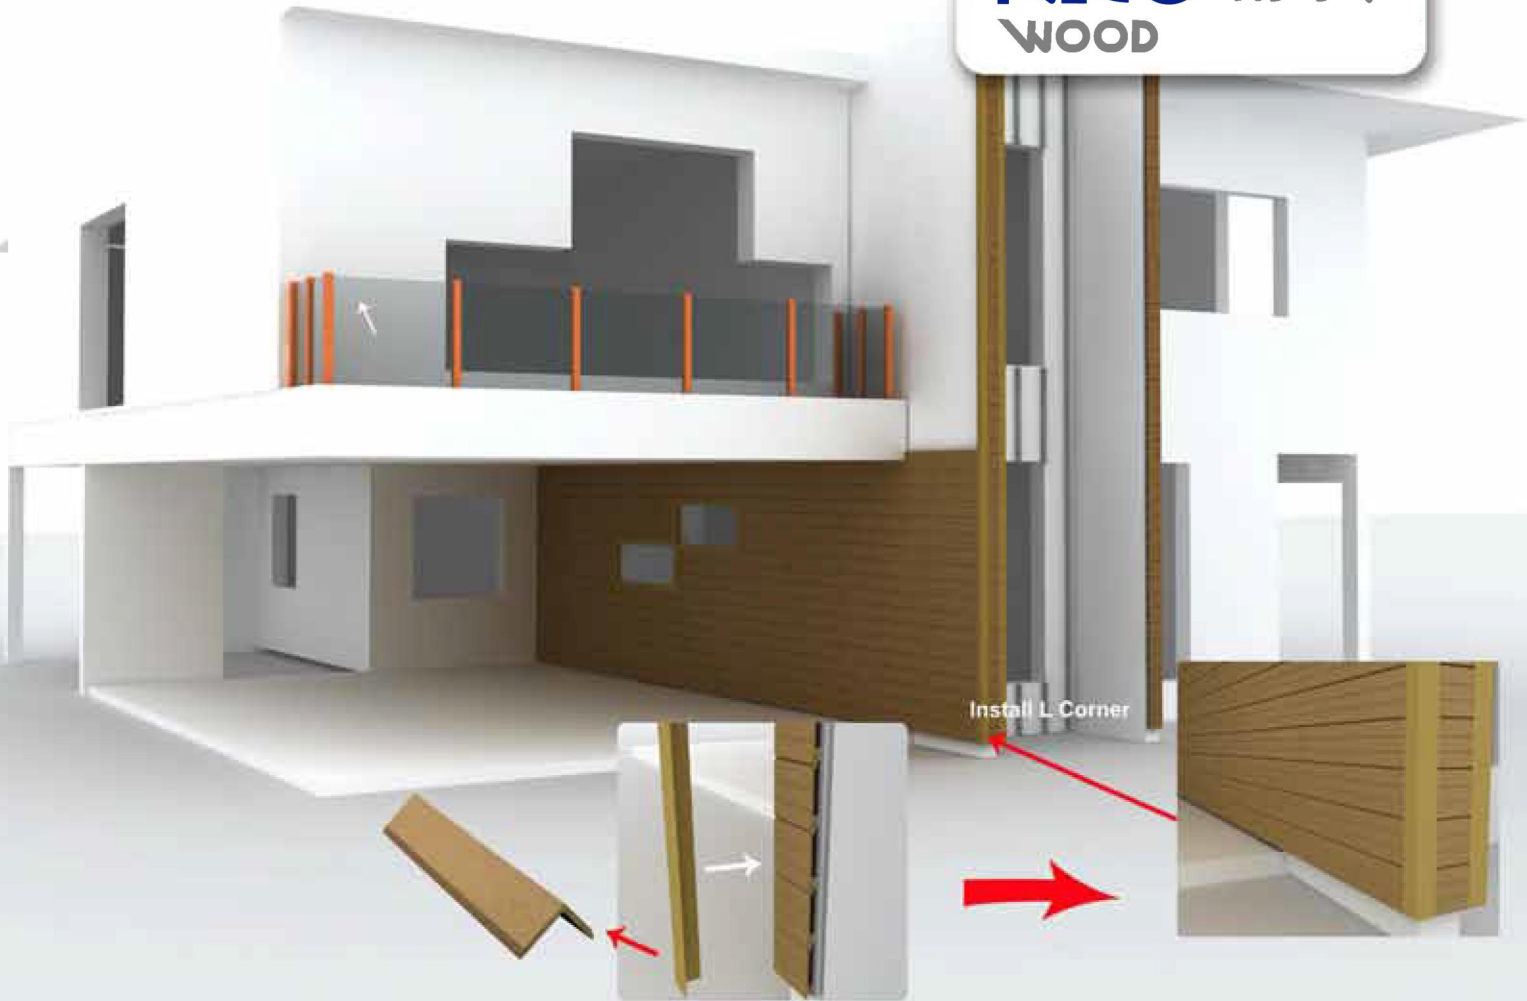

One side wall's installation be the example, and other walls is same with it.