

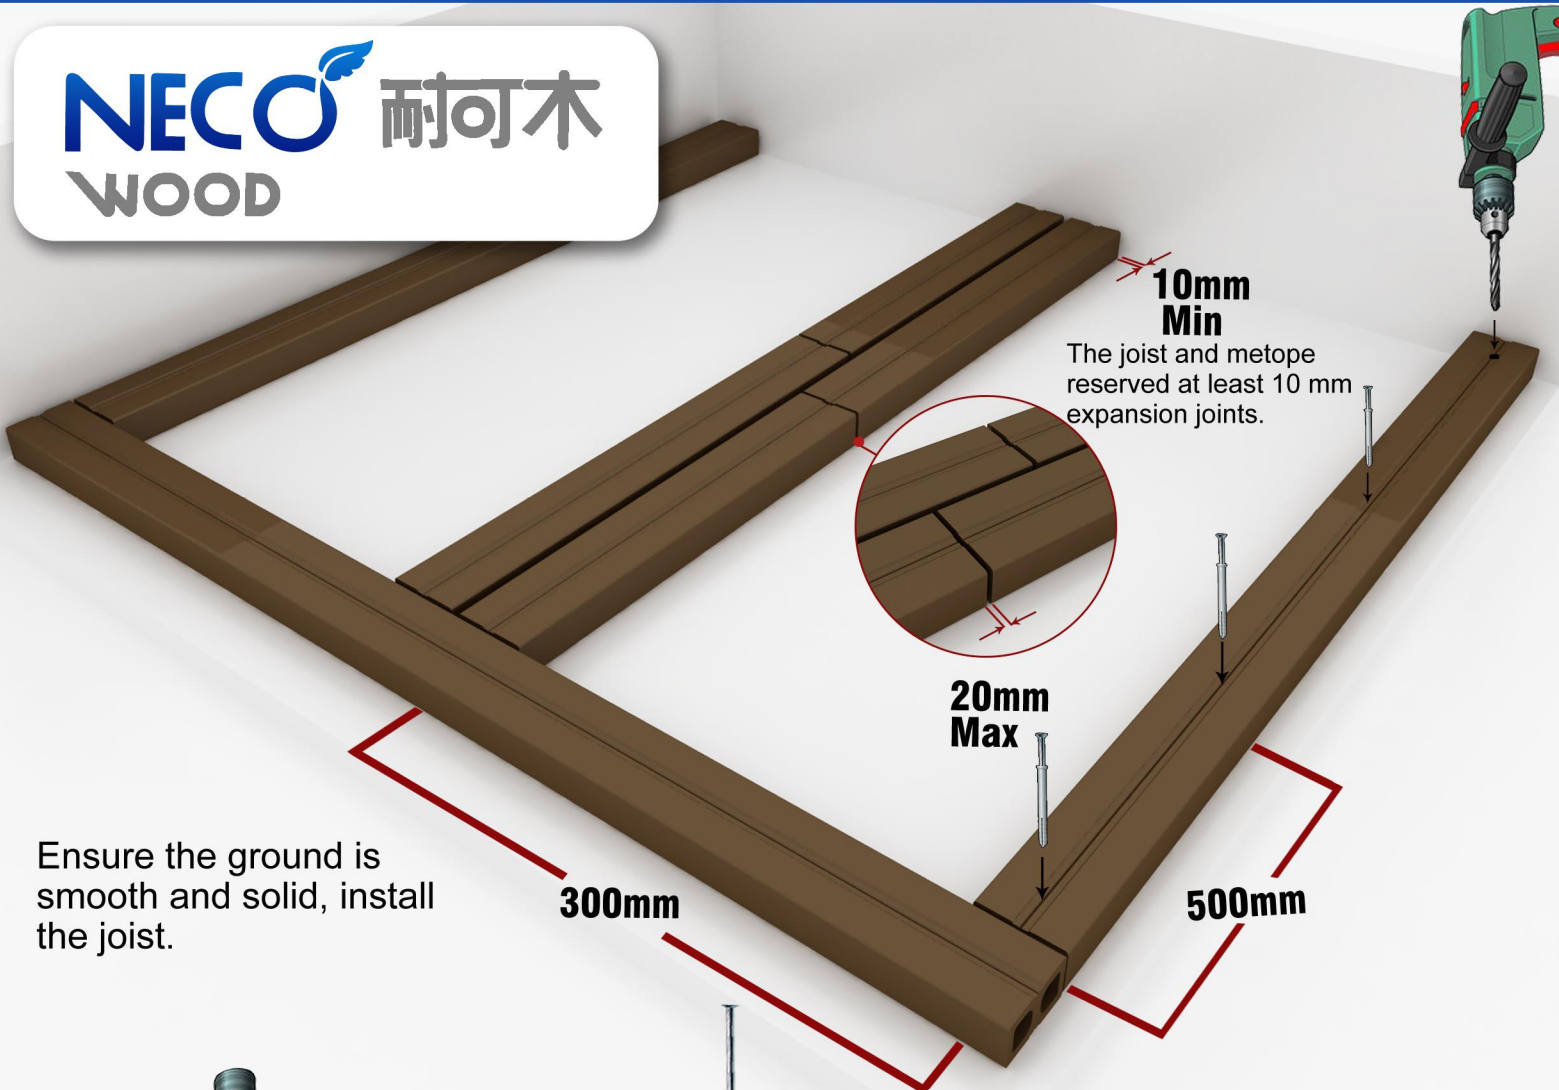


# DECKING INSTALLATION


**NECO** 耐可木  
WOOD

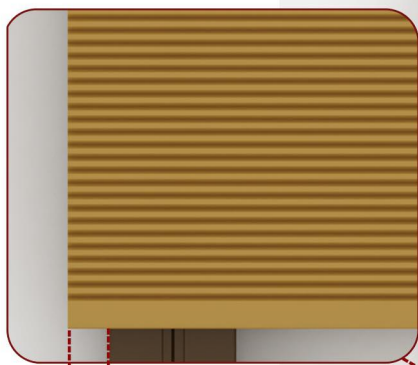

Ensure the ground is smooth and solid, install the joist.

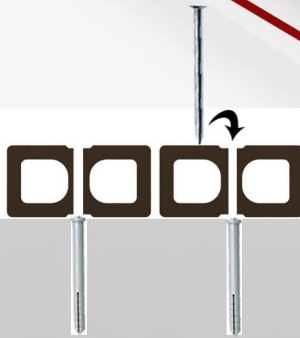

10mm Max

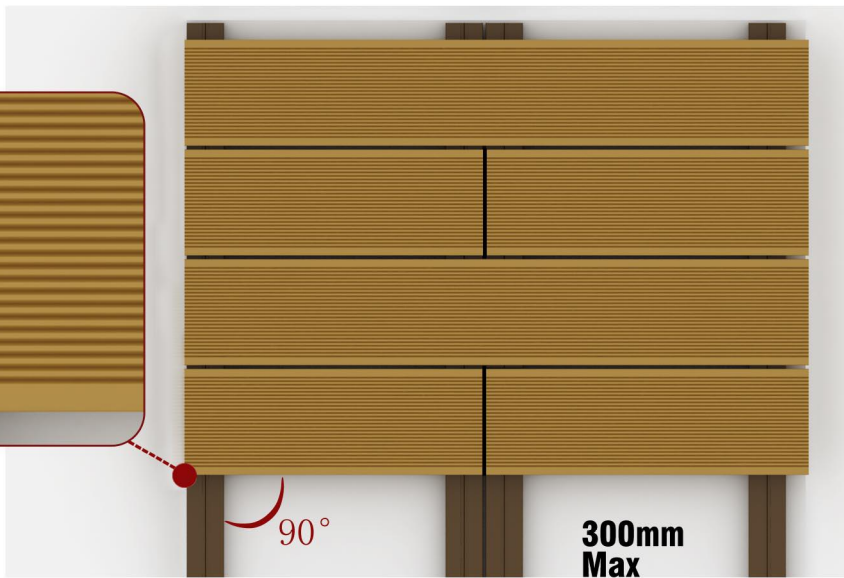


90°

300mm Max


## Fixed joist

When installation, the WPC decking must be perpendicular to the joist.

# DECKING INSTALLATION

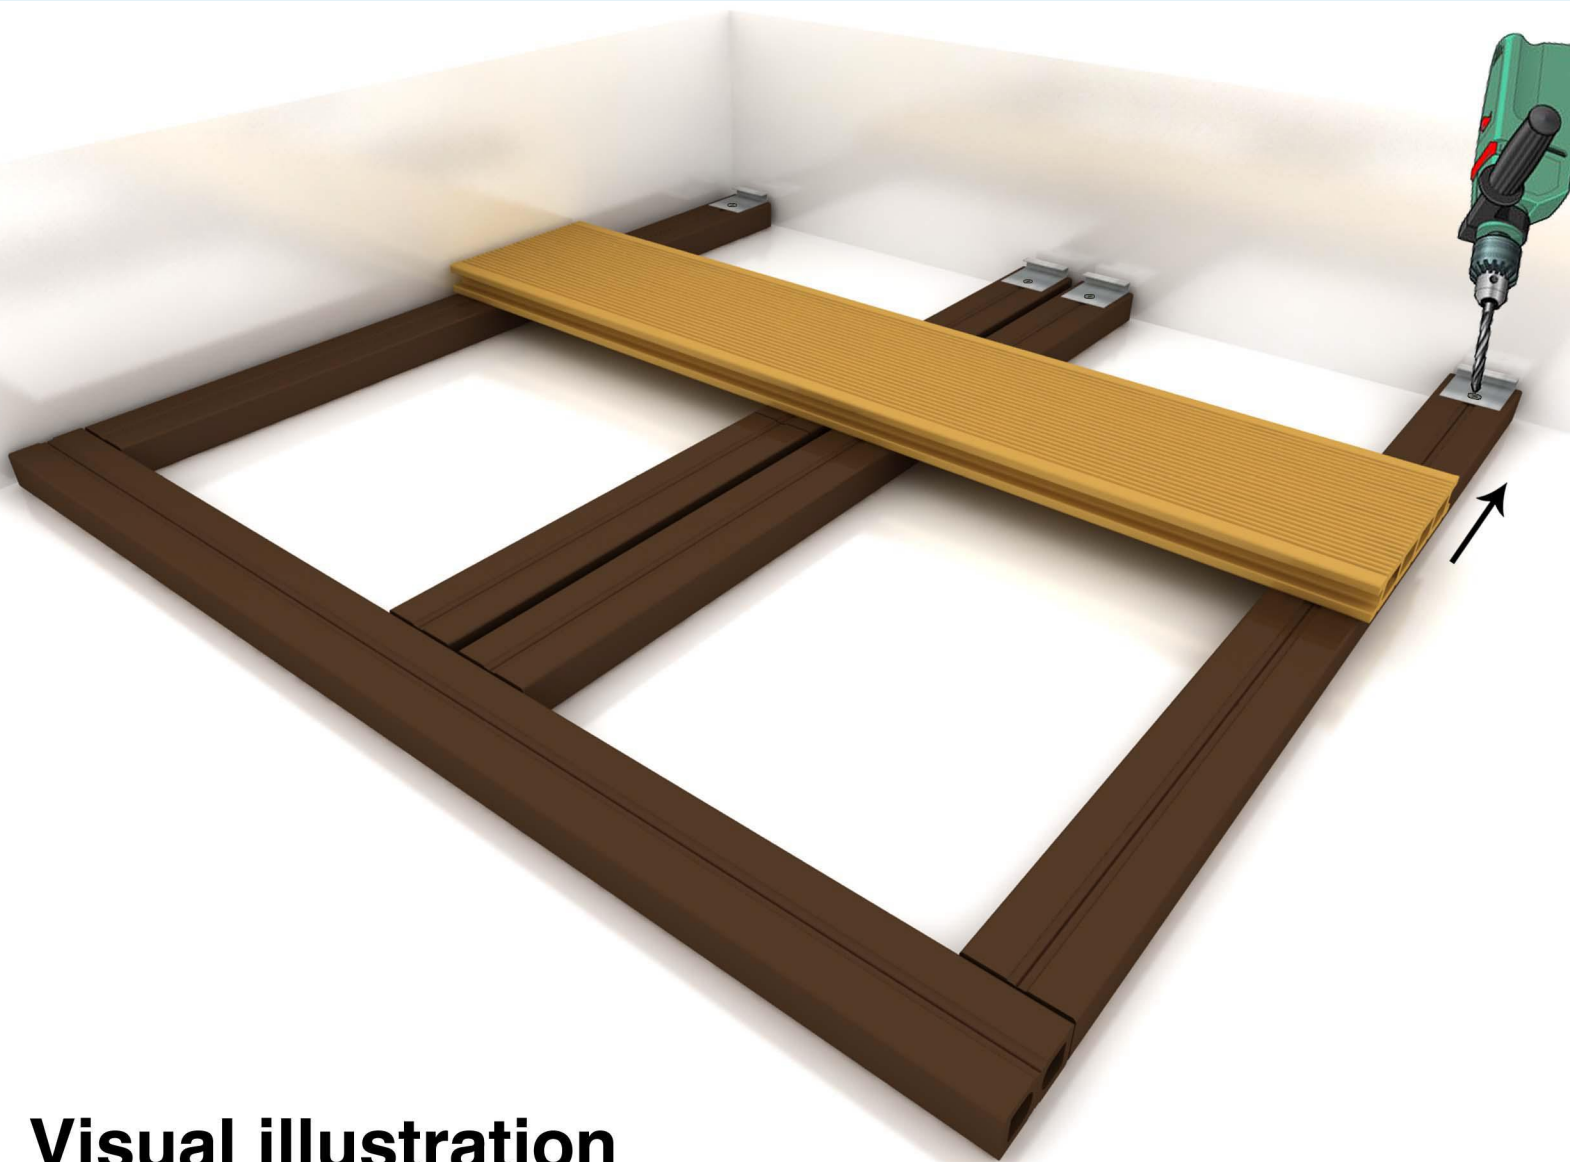


**Visual illustration**

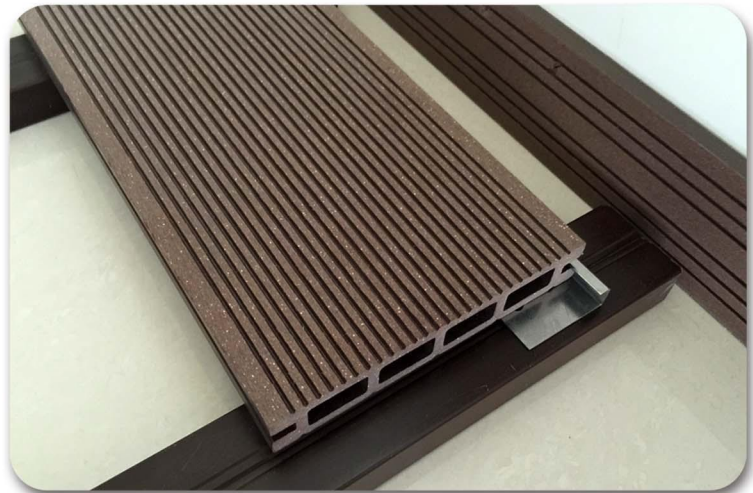






# DECKING INSTALLATION

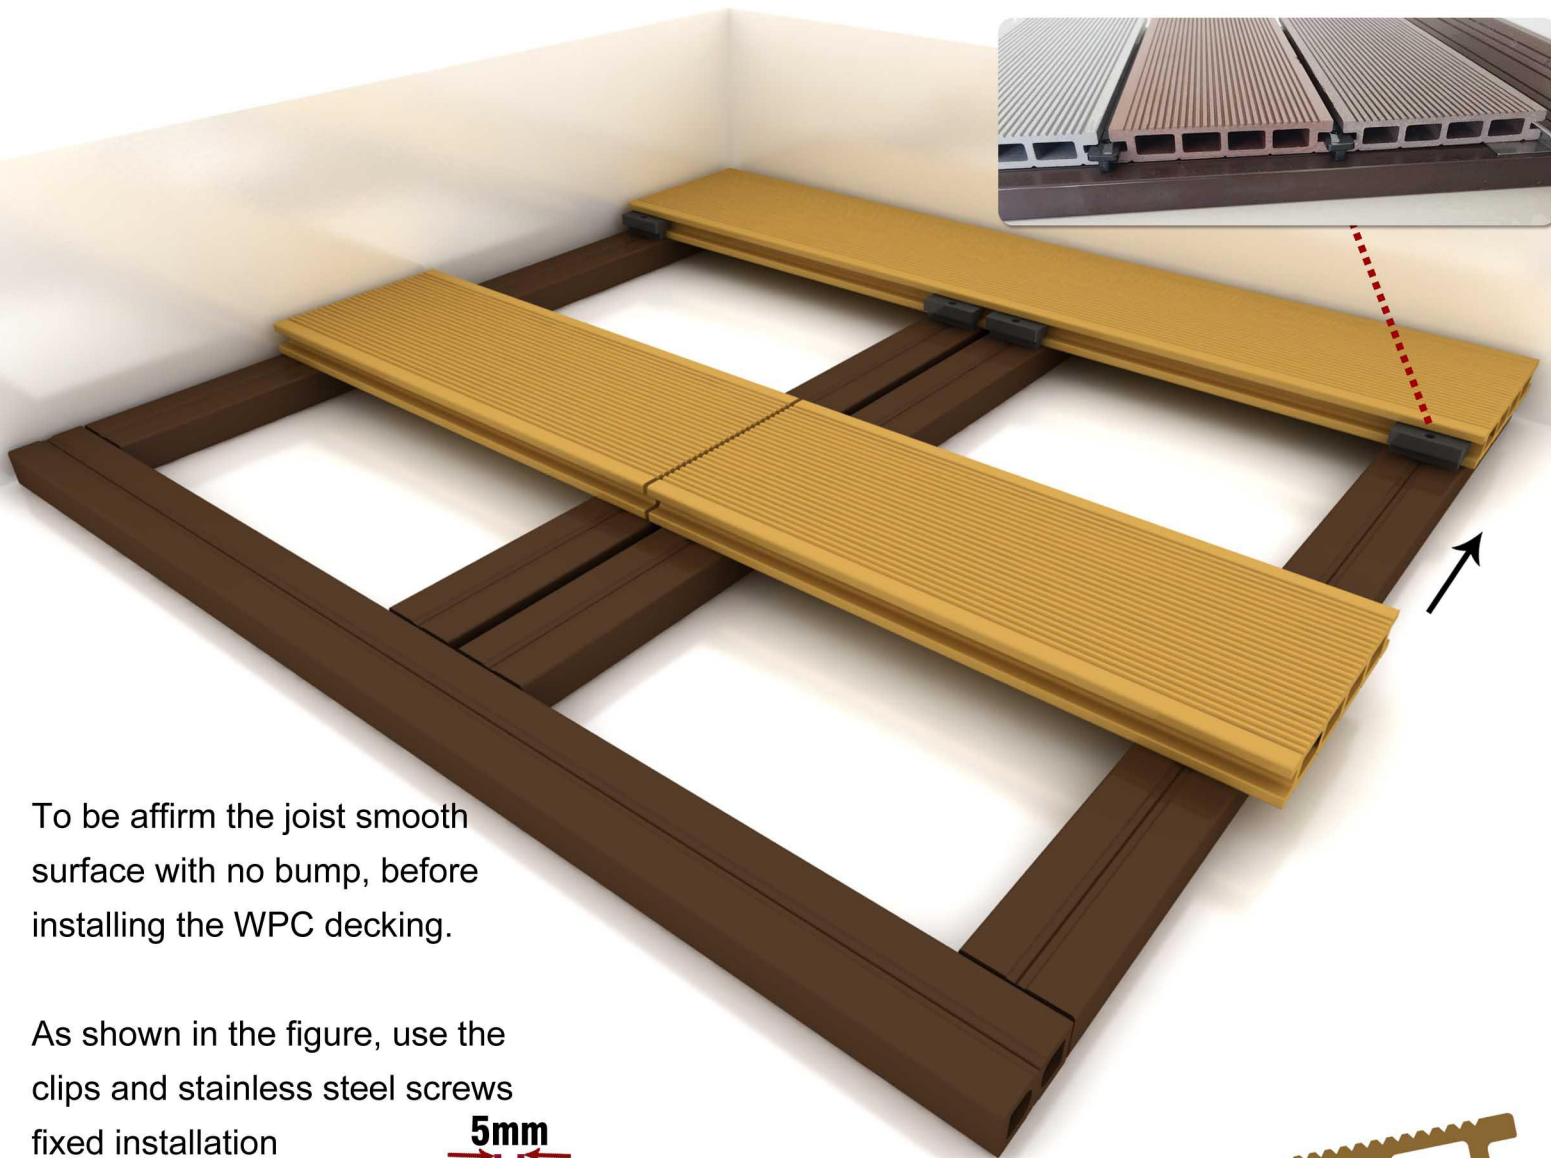


To be affirm the joist smooth surface with no bump, before installing the WPC decking.


As shown in the figure, use the clips and stainless steel screws fixed installation

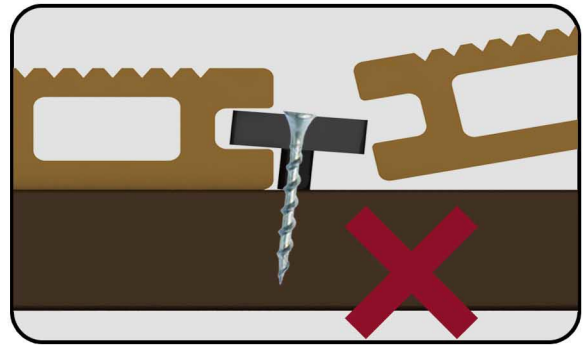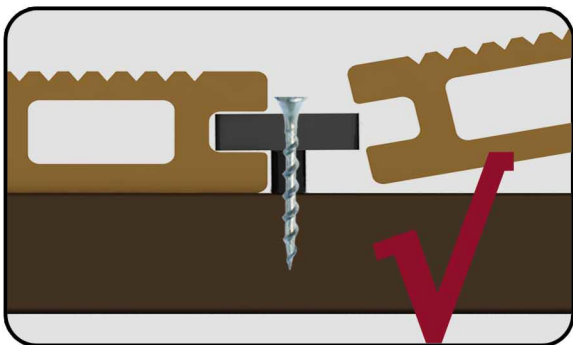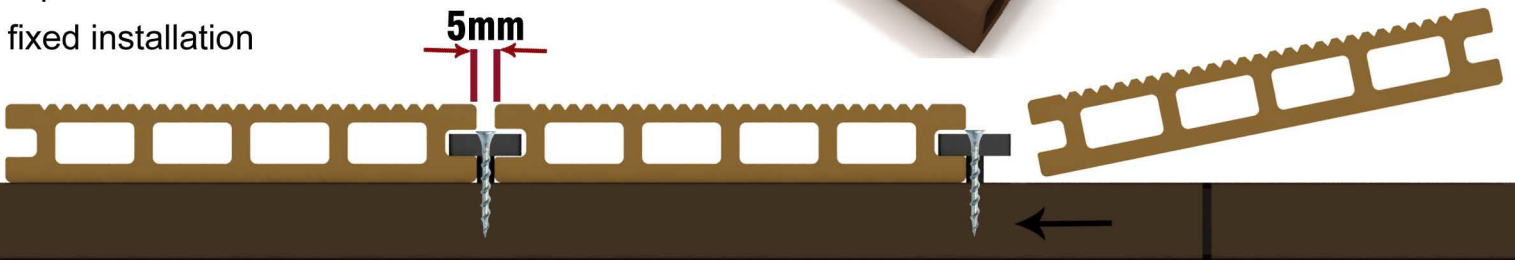

# DECKING INSTALLATION

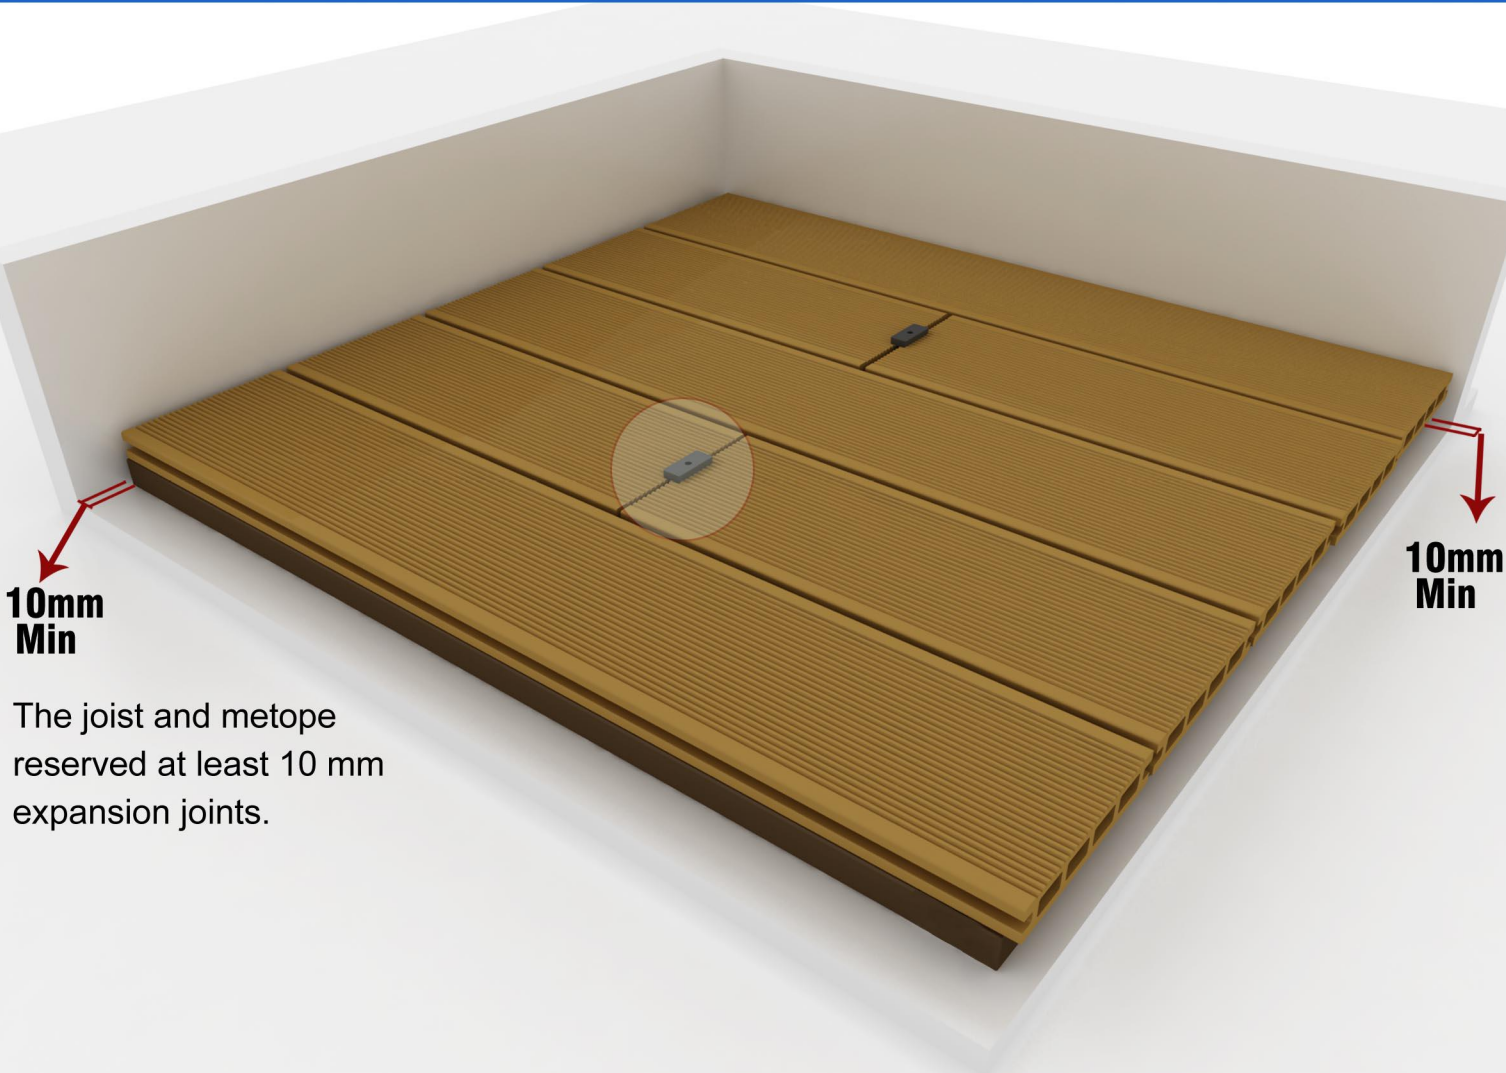


The joist and metope reserved at least 10 mm expansion joints.

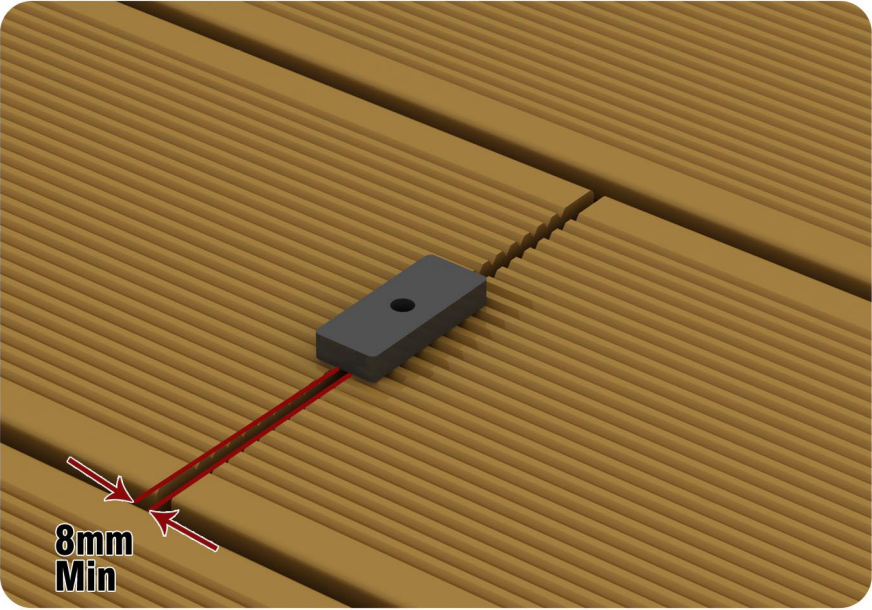

With the clips for reference, make sure the reserved expansion joints between two WPC decks at least 8mm.




# DECKING INSTALLATION

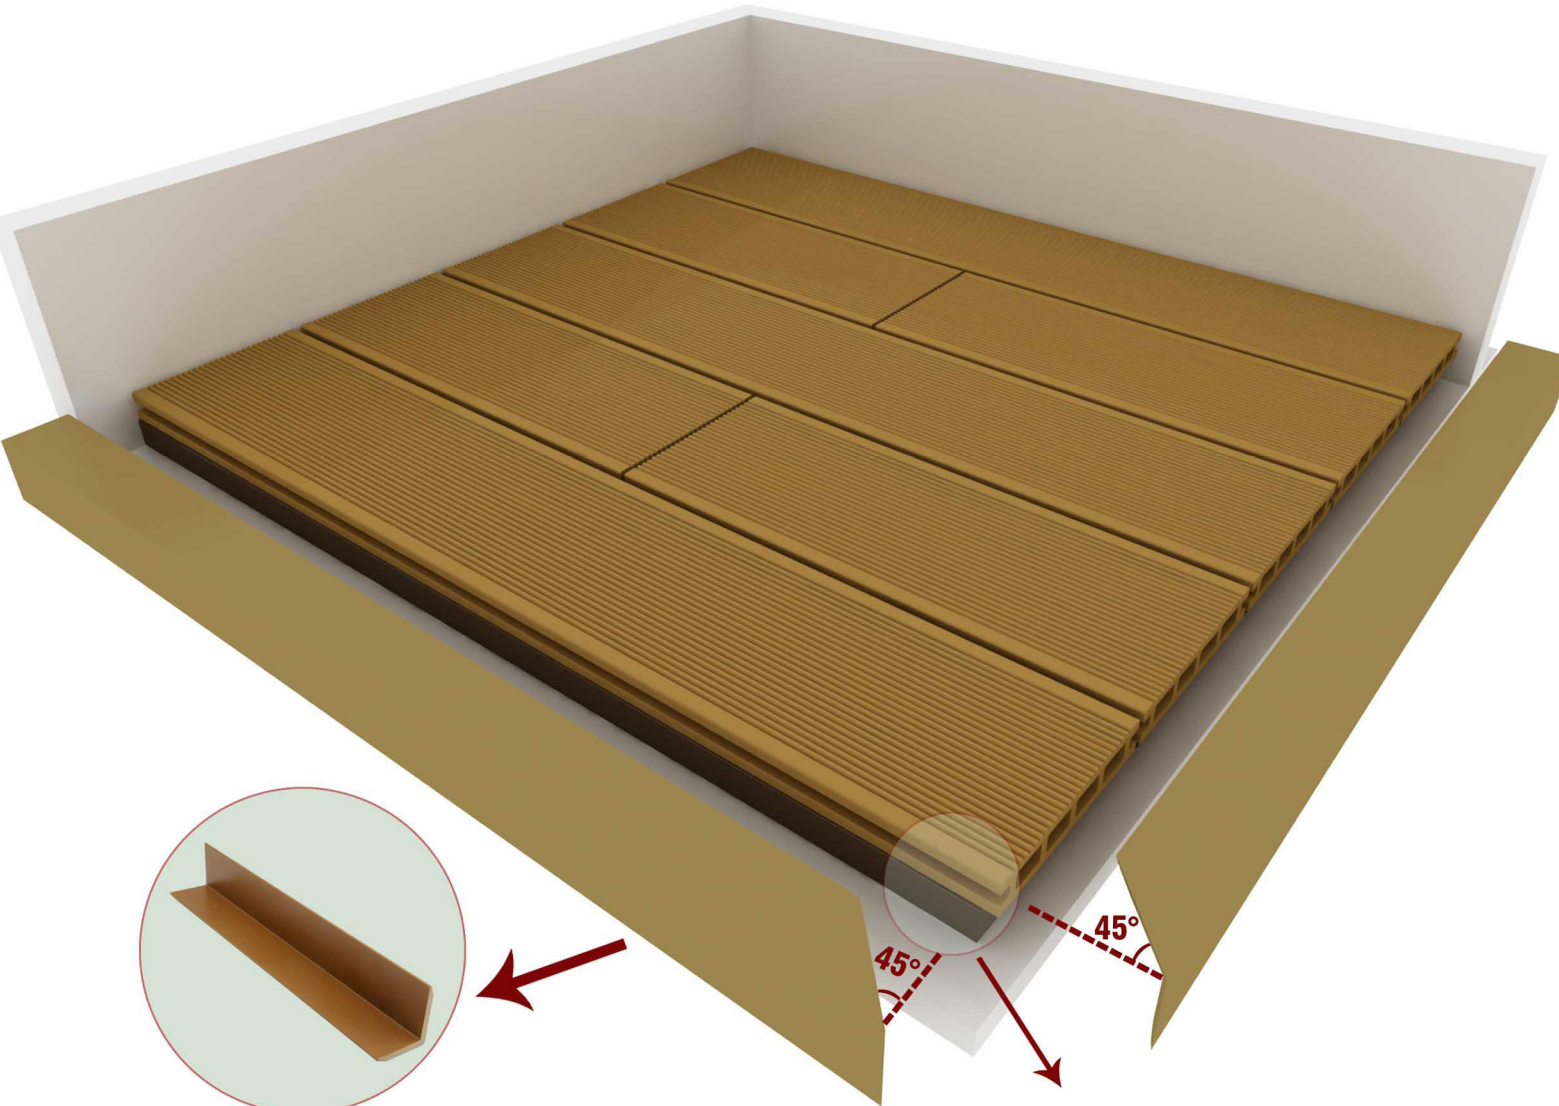

Cutting the L-corner to 45 degrees and stitching at the coner of the terrace decking.



Fixed the L corner with screws to complete the installation.

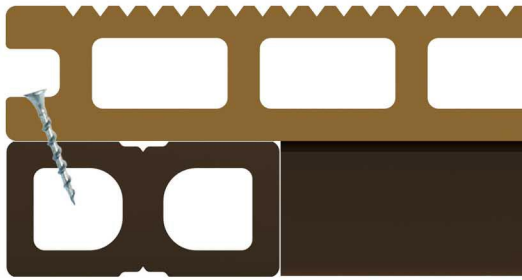


The first piece WPC deck fixation, use the screw 45 degrees oblique drilled into the WPC deck and joist.



# DECKING INSTALLATION

Installation finished.

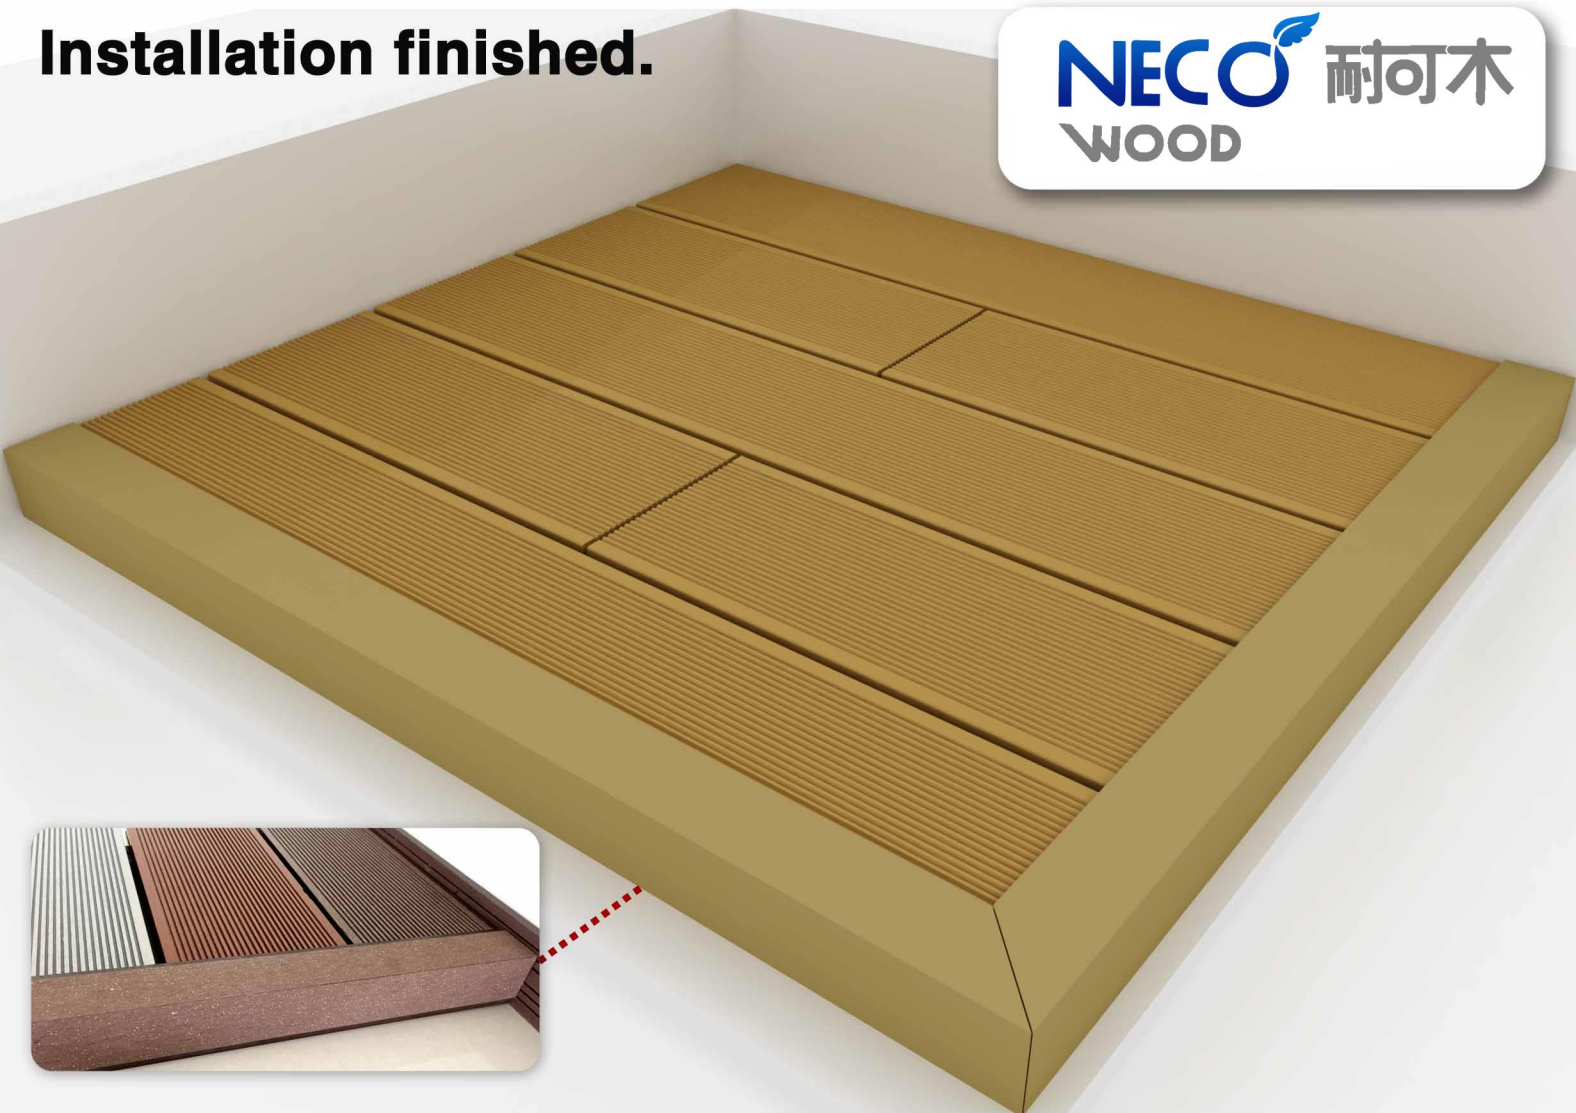

The finished project pictures.

